




FIGURING TRANSOM DIMENSIONS

SQUARE BOTTOM TRANSOM

No Bar in Frame

Overall height	9-0	
Door height	- 7-0	
	2-0	
Frame header	- 0-2	
	1-10	
Top clearance	- 1/8"	
Net Transom Height	1-9	7/8"

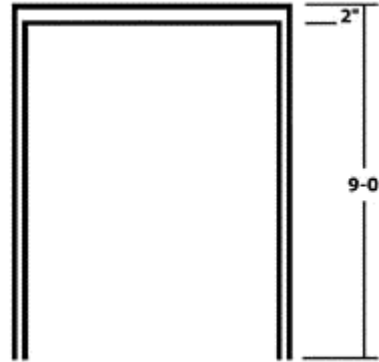

Nominal door height	7-0	
Top clearance	- 1/8"	
	6-11	7/8"
Undercut	- 1/2"	
Net Transom Height	6-11	3/8"

RABBETED TRANSOM

(Example: 1/2" Rabbeted)

Overall height	9-0	
Door height	- 7-0	
	2-0	
Frame header	- 0-2	
	1-10	
Top clearance	- 1/8"	
	1-9	7/8"
Rabbeted dimension	+ 1/2"	
Net Transom Height	1-10	3/8"

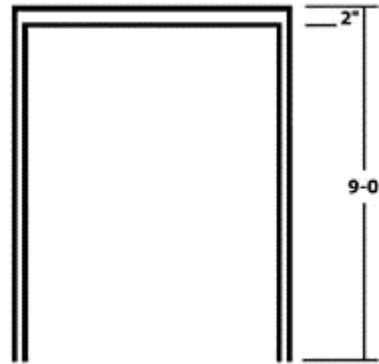


Figure **Net Door Height** as demonstrated previously.



SQUARE BOTTOM TRANSOM
Fixed Bar Between Door & Transom

Overall height	9-0	
Door height	- 7-0	
		<hr/>
	2-0	
Frame header	- 0-2	
		<hr/>
	1-10	
Bar thickness	- 0-2	
		<hr/>
	1-8	
Top clearance	- 1/8"	
		<hr/>
	1-7	7/8"
Bottom clearance	- 1/8"	
		<hr/>
Net Transom Height	1-7	3/4"

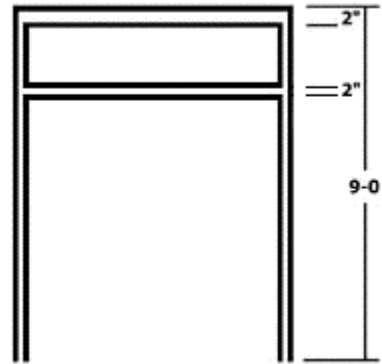


Figure **Net Door Height** as demonstrated previously.

SQUARE TRANSOM
with #217 astragal set

Overall height	9-0	
Door height	- 7-0	
		<hr/>
	2-0	
Frame header	- 0-2	
		<hr/>
	1-10	
Top clearance	- 1/8"	
		<hr/>
	1-9	7/8"
Bottom clearance	- 1/8"	
		<hr/>
Net Transom Height	1-9	3/4"

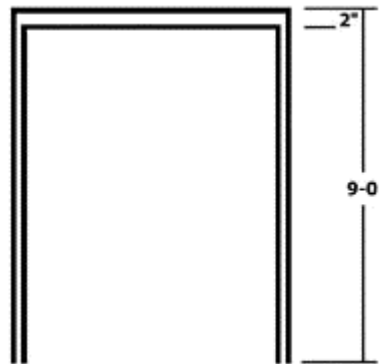


Figure **Net Door Height** as demonstrated previously.