




FIGURING TRANSOM DIMENSIONS

Heritage Collection – Flush

SQUARE BOTTOM TRANSOM

No Bar in Frame

Overall height	9-0	
Door height	- 7-0	
	2-0	
Frame header	- 0-2	
	1-10	
Top clearance	- 1/8"	
Net Transom Height	1-9 7/8"	

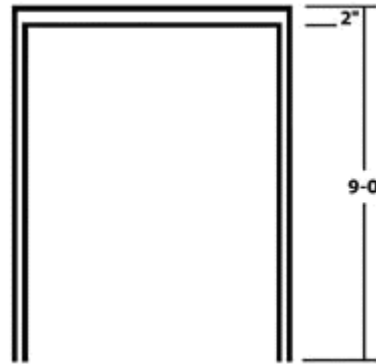

Nominal door height	7-0	
Top clearance	- 1/8"	
	6-11 7/8"	
Undercut	- 1/2"	
Net Door Height	6-11 3/8"	

RABBETED TRANSOM

(Example: 1/2" Rabbeted)

Overall height	9-0	
Door height	- 7-0	
	2-0	
Frame header	- 0-2	
	1-10	
Top clearance	- 1/8"	
	1-9 7/8"	
Rabbeted dimension	+ 1/2"	
Net Transom Height	1-10 3/8"	

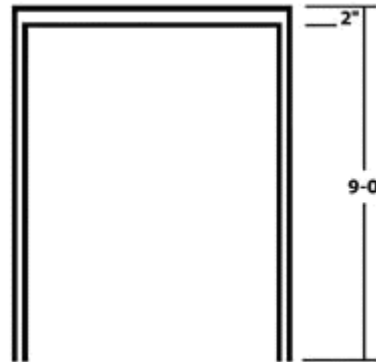


Figure **Net Door Height** as demonstrated previously.



SQUARE BOTTOM TRANSOM

Fixed Bar Between Door & Transom

Overall height	9-0	
Door height	- 7-0	
		<hr/>
		2-0
Frame header	- 0-2	
		<hr/>
		1-10
Bar thickness	- 0-2	
		<hr/>
		1-8
Top clearance	- 1/8"	
		<hr/>
		1-7 7/8"
Bottom clearance	- 1/8"	
		<hr/>
Net Transom Height	1-7	3/4"

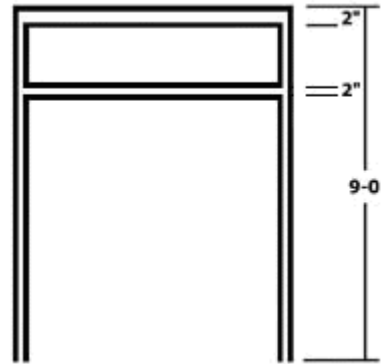


Figure **Net Door Height** as demonstrated previously.

**SQUARE TRANSOM
with #217 astragal set**

Overall height	9-0	
Door height	- 7-0	
		<hr/>
		2-0
Frame header	- 0-2	
		<hr/>
		1-10
Top clearance	- 1/8"	
		<hr/>
		1-9 7/8"
Bottom clearance	- 1/8"	
		<hr/>
Net Transom Height	1-9	3/4"

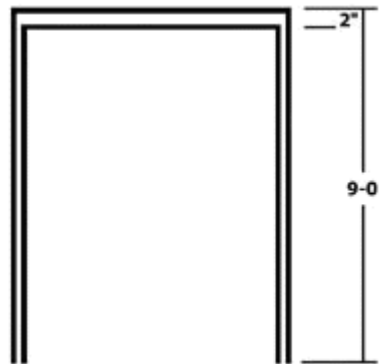


Figure **Net Door Height** as demonstrated previously.