

LONDONER MITER INSTALLATION

Please use the Stretta Installation Kit to complete the Londoner miter installation on your Stretta countertops. First, install four wood biscuits into one side of the countertop (figure 1.1). Apply a generous amount of color-matched adhesive to the joint and biscuits then join your countertops. Secondly, after the adhesive dries and the excess glue is removed, drive the three specialty screws into the pockets using the specialty screw bit. These pockets can all be found on the right-hand miter, two pockets are located on the bottom and one is located on the back (figure 1.2).

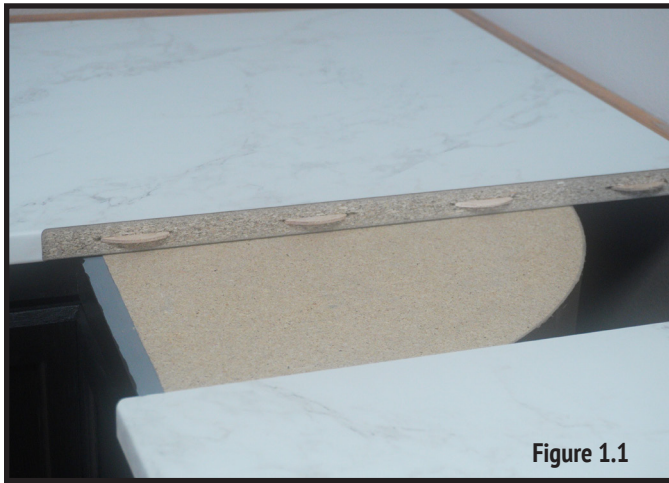


Figure 1.1



Figure 1.2

IDENTIFYING MITER PIECES

The Stretta miter pieces are labeled as left-hand miter and right-hand miter. Both sections are very similar, but also have key distinctions. The miter cut will always be found on the right-hand miter. The key distinction for the left-hand miter is that the miter joint is at the very end of the countertop and the left-hand miter is the only piece with the pocket holes on the bottom and on the back.

