

INSTALLATION INSTRUCTIONS

Includes:

- Zero 369 Automatic door bottom
- Zero 188S Perimeter seal (double row)
- Pemko ACP112 Acoustical corner pad (x2)


1. Install the Pemko STC411APK door bottom in accordance with the manufacturer's instructions prior to hanging the door. **See drawing #1.**

2. Hang the door and adjust for proper clearances.


3. Prepare the frame by cleaning the jamb, header and stops where the Zero 188S seals will be applied.

4. Measure, cut and apply the Zero 188S seals to the frame jambs and header. Note there are two rows of the Zero 188S. **See drawing #2.** The Zero 188S should be full opening width on the top, with the vertical legs extending from the top of the threshold and butted against the top strip. Use full-length pieces to avoid joint gaps.


5. Apply Pemko ACP112 (x2) to bottom corners of jambs. **See drawing #3.**

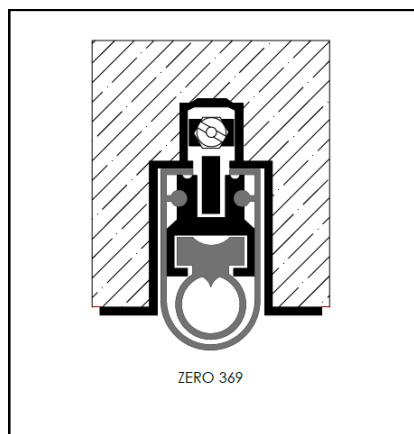

Drawing #1

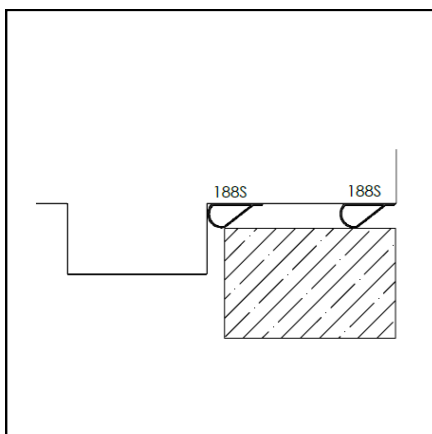

Drawing #2

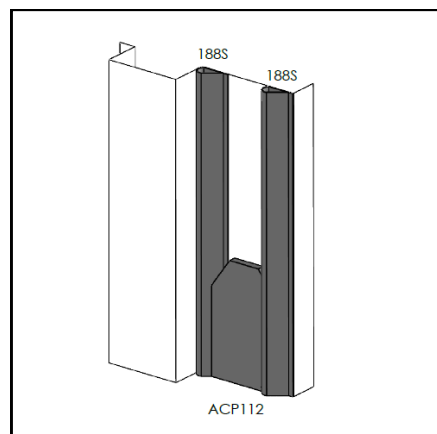

Drawing #3