

INSTALLATION INSTRUCTIONS

Includes:

- NCP 12T6 X STC-FH Door shoe with fastener holes
- NCP 5075 Triple fin smoke seal
- NCP 5060 Silicone fin smoke seal
- NCP 60FP Acoustical foam pad (x2)

1. Install the NCP 12T6 door shoe in accordance with the manufacturer's instructions prior to hanging the door. **See drawing #1.**

2. Hang the door and adjust for proper clearances.


3. Prepare the frame by cleaning the jamb, header and stops where the NCP 5075 and NCP 5060 seals will be applied.

4. Measure, cut and apply the NCP 5075 and NCP 5060 seals to the frame jambs and header, locating the NCP 5075 on the frame stop and the NCP 5060 on the frame jamb. **See drawing #2.** The NCP 5075 and NCP 5060 should be full opening width on the top, with the vertical legs extending from the top of the threshold and butted against the top strip. Use full-length pieces to avoid joint gaps.


5. Apply NCP 60FP (x2) to bottom corners of jambs. **See drawing #3.**

6. Measure, cut and apply the NCP 5060 (x2) to the meeting edge of the inactive door. Use full-length pieces to avoid joint gaps. **See drawing #4.**


7. Apply NCP 60FP to the bottom of the meeting edge of the inactive door. **See drawing #4.**

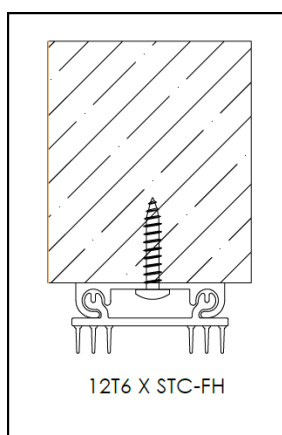


Drawing #1

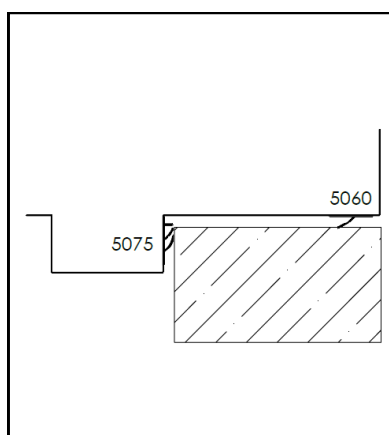

Drawing #2

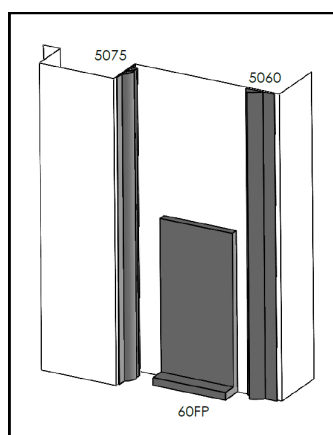

Drawing #3

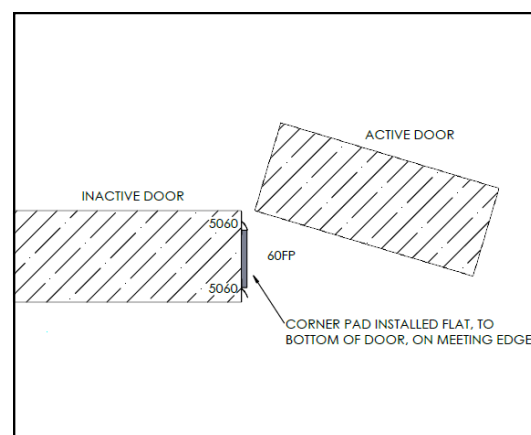

Drawing #4