


## INSTALLATION INSTRUCTIONS

---


Includes:

- Pemko 2008\_APK Threshold
- Pemko S44 Silicone seal
- Pemko 312\_R Perimeter seal
- Pemko ACP112 Acoustical corner pad (x2)


1. Install the Pemko 2008\_APK threshold in accordance with the manufacturer's instructions prior to hanging the door. **See drawing #1.**
2. Hang the door and adjust for proper clearances.
3. Prepare the frame by cleaning the jamb, header and stops where the Pemko S773 seal will be applied.
4. Measure, cut and apply the Pemko S44 seal to the frame jambs and header. **See drawing #2.** The Pemko S44 should be full opening width on the top, with the vertical legs extending from the top of the threshold and butted against the top strip. Use full-length pieces to avoid joint gaps.
5. Install the Pemko 312\_R Perimeter seal in accordance with the manufacturer's instructions. See drawing #2.
6. Apply Pemko ACP112 (x2) to bottom corners of jambs. **See drawing #3.**

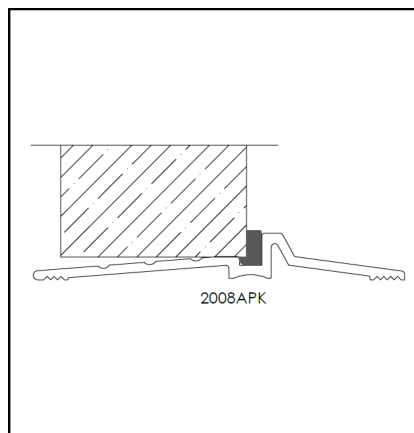

**Drawing #1**

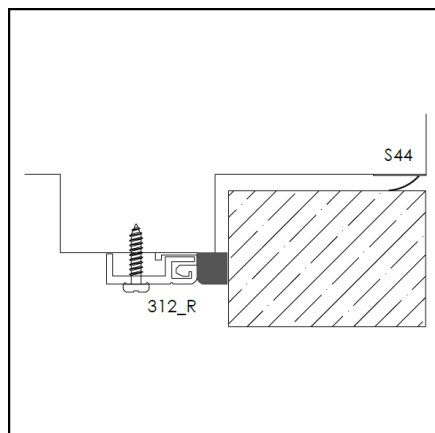

**Drawing #2**

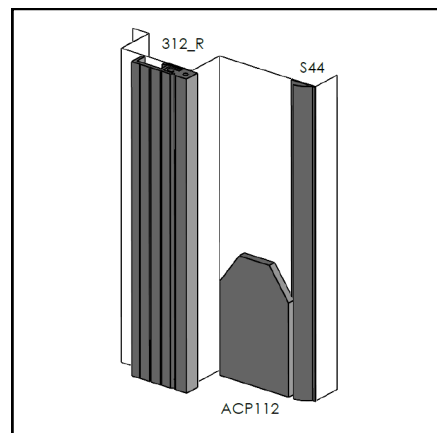

**Drawing #3**