


## INSTALLATION INSTRUCTIONS

---


Includes:

- DHSI CS Cap sweep door bottom
- DHSI 105 "Cush 'N' Seal"
- DHSI SA-75 Seal
- DHSI DP-.250 Decibel plug (x2)


1. Install the DHSI CS cap sweep door bottom in accordance with the manufacturer's instructions prior to hanging the door. **See drawing #1.**
2. Hang the door and adjust for proper clearances.
3. Prepare the frame by cleaning the jamb, header and stops where the DHSI 105 and DHSI SA-75 seals will be applied.
4. Measure, cut and apply the DHSI 105 and DHSI SA-75 seals to the frame jambs and header. **See drawing #2.** The DHSI 105 and DHSI SA-75 seals should be full opening width on the top, with the vertical legs extending from the top of the threshold and butted against the top strip. Use full-length pieces to avoid joint gaps.
5. Apply DHSI DP-.250 (x2) to bottom corners of jambs, adjacent to the DHSI 105 seal. The decibel plug should be sized as required during installation to 1-1/2" wide by the dimension between the top of the AMDB3-3 and the sill (undercut + AMDB3-3 mortise depth). **See drawing #3.**

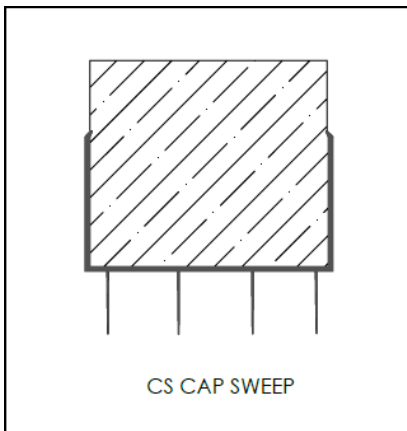

**Drawing #1**

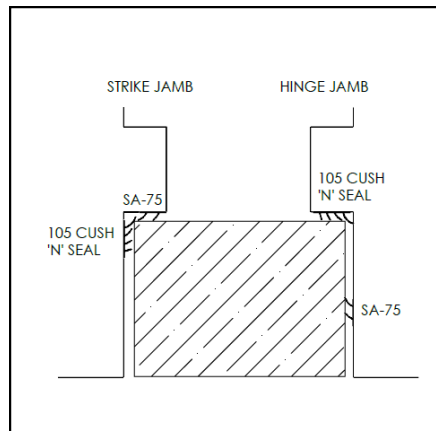

**Drawing #2**

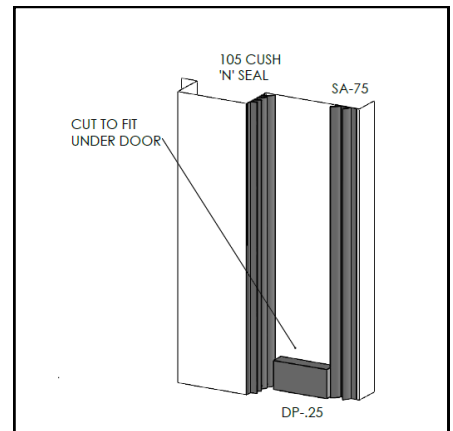

**Drawing #3**